

Installation instruction

Instructions for use

1. Please read all instructions before installation and carefully read installation precautions;
2. Suitable for indoor dry places, can not be installed in the water environment;
3. Be sure to turn off the power before installation to prevent electric shock;
4. PC cover, PC embossed cover, tear off the surface protective film before installation.


Luminaire description:

According to the different models, this lamp has different lengths and AC220V, DC24V, constant current three power access modes, please select the slot size and match the power supply according to the specific model and installation mode.


Main materials and usage of lamps: profiles, light source plate, PC cover, PC embossed cover + diffusion plate (first install diffusion plate, diffusion plate frosted surface outward; The concave and convex surface of the prism plate faces outward, the smooth surface faces inward), the end cover, the open-mounted splicing accessories, the hoisting splicing accessories, the tin foil paper and the leakproof curing adhesive (used for splicing lamps).

installation instructions:

(1) Splicing method:

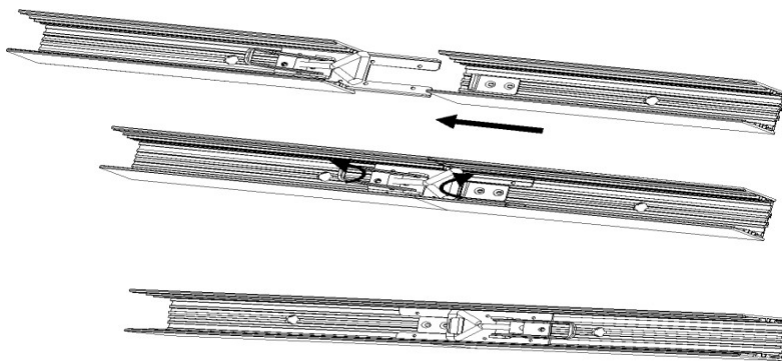


(2) Mask installation method:

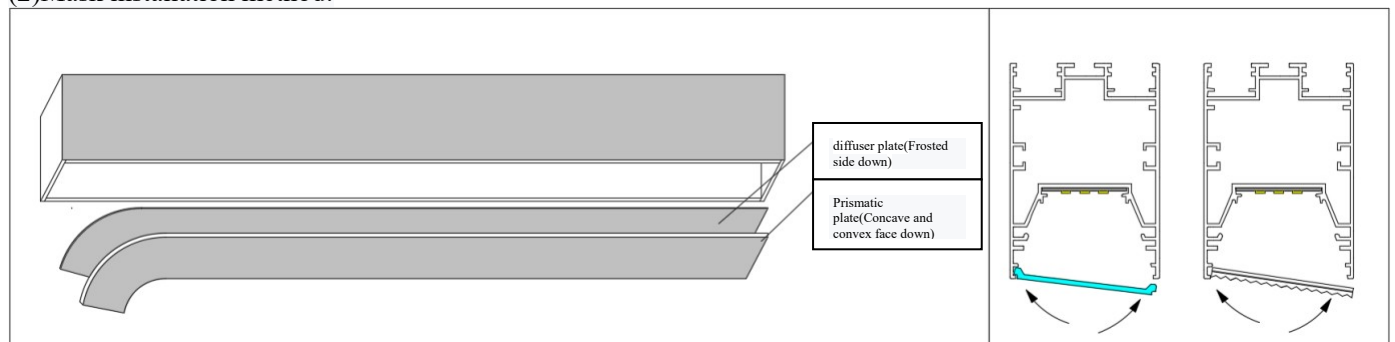


(3) Lamp type:

1. ceiling type



2. ceiling mounted

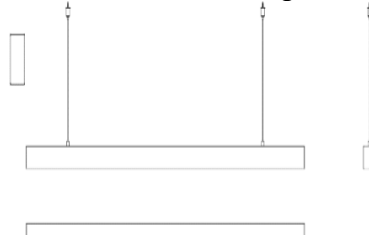


3. flushbonading



Secure, do not lock completely


(4) Installation Method:

1. surface mounted

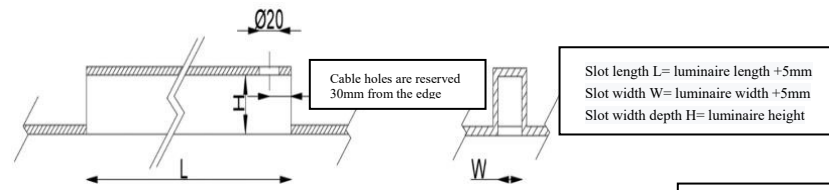


disjointed

joint

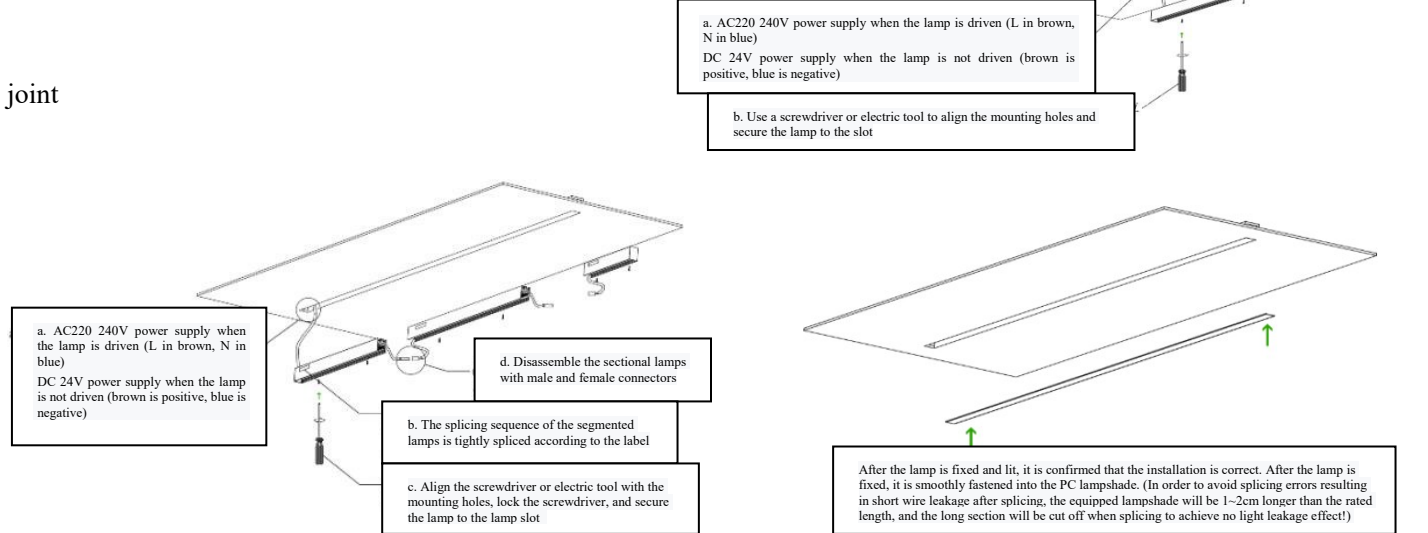


2. hoisting

joint

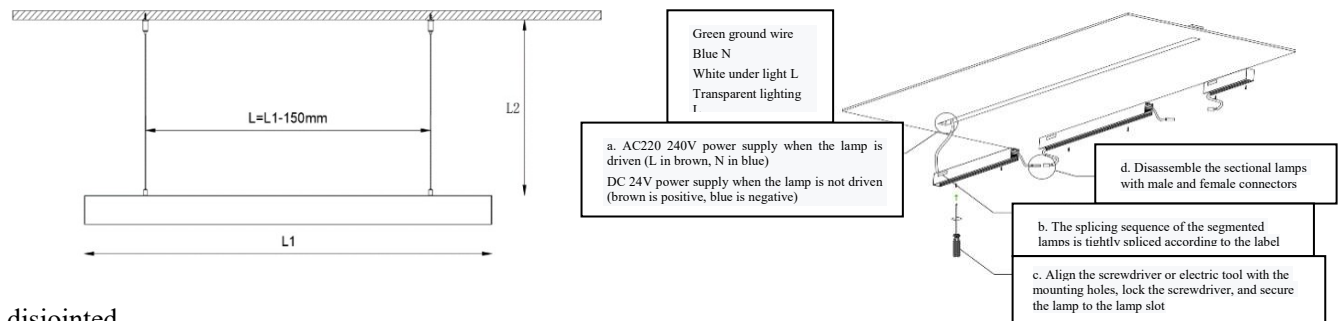

disjointed

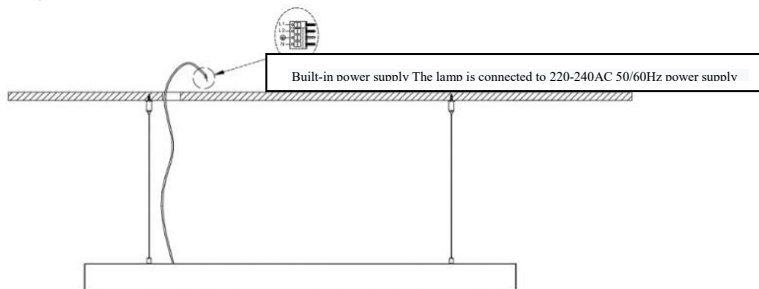


3. flushbonading

Installation AIDS use method:

- a. Clamp the installation auxiliary to the profile



b. When loading the ceiling, first load one end of the lamp body into the ceiling, and then install the other end, pay attention to the ceiling hole ruler





Opening size: $L+5\text{mm} * W+5\text{mm} * H+50\text{mm}$
 $L2 < 20\text{mm}$

c. Mount the lamp in the ceiling



Secure, do not lock completely!

d. Into the PC mask or prism plate (specific operation reference: mask installation method)

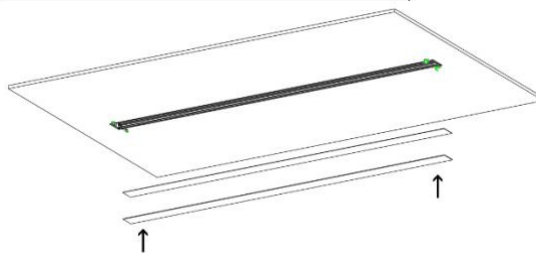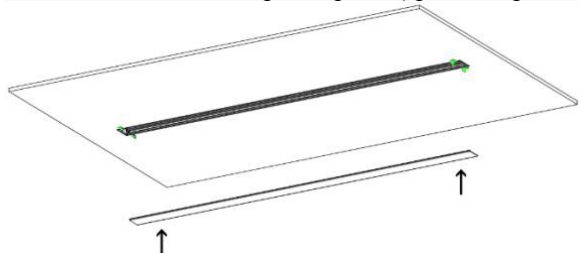

e. Take out the installation accessories

